

## INSTALLATION INSTRUCTIONS FOR QUICK-STEP HYBRID VINYL BLOOM


TO OBTAIN THE BEST RESULT, THE INSTALLATION INSTRUCTIONS MUST BE CAREFULLY FOLLOWED BY ALL PARTIES.

Please make sure that the end user of the flooring has a copy of this document.  
Please check with your local building authority regarding floor application and suitability.

- Site and installation conditions must always comply with the relevant national and state regulations and installation standards.
- In case the national and state regulations conflict with the manufacturer's recommendations, the most stringent of the two prevails.

### 1. PREPARATION


We recommend to order all boxes for the same commercial flooring project at the same time.

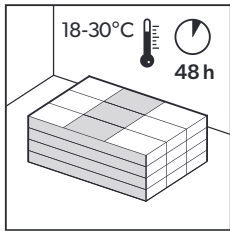

1

Always store and transport Quick-Step Hybrid Vinyl floors carefully to prevent distortions. Store and transport the boxes on a flat surface in neat stacks. Never store the boxes upright or in moist or in dusty rooms. Do not store the boxes in very cold ( $< 5^{\circ}\text{C}$ ) or very warm ( $> 35^{\circ}\text{C}$ ) or in humid places. Quick-Step Hybrid Vinyl floors must be acclimatised in the room of installation between  $18-30^{\circ}\text{C}$  for a period of at least 48 hours before installation. This floor & room temperature needs to be maintained prior to, during and for at least 24 hours after the installation is completed.


**Install your floor between  $18-30^{\circ}\text{C}$  and a subfloor temperature of above  $15^{\circ}\text{C}$ .**

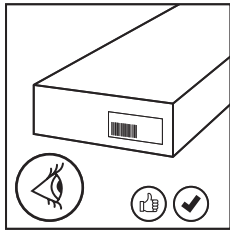

2


Quick-Step Hybrid Vinyl floors can be bought in different formats, decors and qualities. Make sure you have received the correct flooring that you ordered before starting the installation.

**Note:** It is always a good idea to store the end labels together with your purchasing receipt.

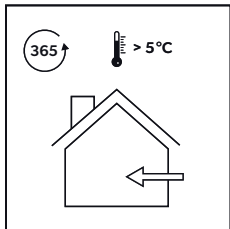

3

Quick-Step Hybrid Vinyl has been designed for indoor heated ( $> 5^{\circ}\text{C}$ ) installations, preferably at normal room temperature ( $= 18-30^{\circ}\text{C}$ ). Quick-Step Hybrid Vinyl cannot be installed in solariums, seasonal porches, camping trailers, boats or any other unheated application.

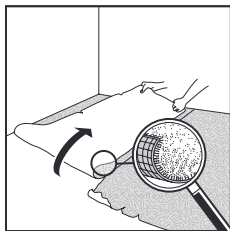


4

The type of subfloor, its quality and its preparation has a big influence on the final installation result. If the subfloor is not appropriate for the installation of Quick-Step Hybrid Vinyl then necessary actions should be taken.

Contact your Quick-Step Hybrid Vinyl dealer, who will be more than happy to help you.

Be aware that unevenness in the subfloor may leave marks and can create gaps in your Quick-Step Hybrid Vinyl floor. **The subfloor should be stable and firmly fixed in accordance with Australian Standards AS1884:2012.**

Furthermore it cannot be soft, damaged or loose laid. Remove existing and /or too soft floorcoverings like carpet, needle felt, cushion vinyl. Floating floor coverings also need to be removed.

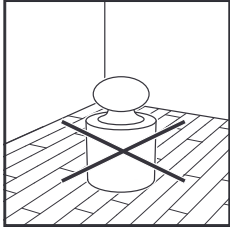

5

Never block the floor.


If heavy/fixed objects (ex. kitchen, kitchen island, build-in cabinets, heavy stoves, door frames, stairs and others) are on the floor, they act as a wall preventing required movement of the flooring.

- Heavy objects should be installed first and not placed on top of the Quick-Step Hybrid Vinyl floor.
- Protection of the flooring from any radiant heat source should also be provided, e.g. around combustion heaters and other heat sources, as these generate extreme low humidity. This can be achieved through the use of a protection plate and appropriate expansion gaps.

The Quick-Step Hybrid Vinyl floor must be able to move around the heavy objects to avoid open joints and separating planks. The expansion gaps size must be respected around all heavy/fixed objects.


**Quick-Step Hybrid Vinyl is a floating floor and should never be adhered to the subfloor.**

If this is not possible, we recommend installing our Quick-Step glue down vinyl as an alternative.

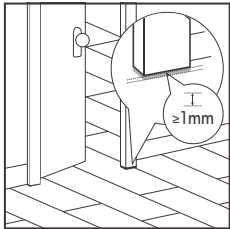

6


If the doorframe is installed after the floor installation, please make sure that a minimum 1mm vertical gap is left between the base of the doorframe and the surface of the floor.

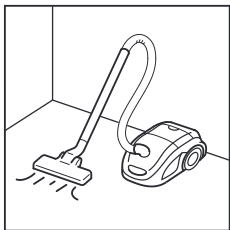

7

**Make sure that the subfloor is dry, flat, stable, clean and free from grease and chemical substances.**

If needed, scrape off and clean up old adhesives. Prior to installation, carefully remove all debris (including nails), sweep and vacuum. Repair major surface imperfections and large cracks. It is recommended to remove old skirtings and to install new ones after the installation of the floor.

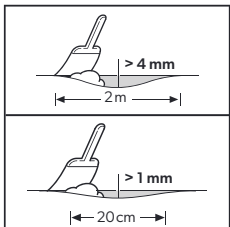

8


**Any unevenness of more than 1mm over a length of 20cm must be levelled out.**


The same applies to unevenness of more than 4mm over a length of 2m.

Cement joints between tiles or other gaps of more than 2mm in depth and 5mm in width should be levelled.

Bumps should be removed by sanding or scraping.

If an appropriate levelling compound is required, check if a primer or sealer is needed.

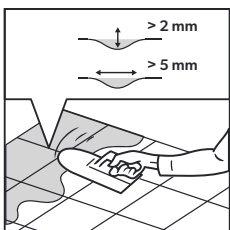

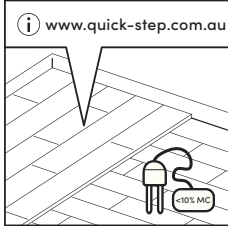

9


In case of installation on a wooden subfloor, please remove any existing floor covering first. No signs of mould and/or insect infestations should be present. If there is moisture in the woodbased subfloor or there is no proper moisture barrier below the woodbased subfloor it has to be removed first. If this is not done the wood will rot after time because the moisture is blocked by the new flooring and its underlay.

Make sure the subfloor is level and nail or screw down any loose parts. Apply a suitable wooden floor panel, level floor, or use levelling compound on top for a perfect subfloor preparation. The levelling boards must be fixed in accordance with AS1884:2012.

It is important that timber subfloors have sufficient cross flow ventilation in the crawl space under the subfloor with unblocked vents on all four sides of the building. Inspection of the crawl space is recommended prior to installation with damp smells or puddles of water in any area to be considered red flags that require further investigation.

**Timber subfloors should be tested in accordance with AS1884 as below 14%MC.**

In the instance that a subfloor is obviously or knowingly wet (insufficiently dry), it is imperative to remedy the cause of the excessive moisture prior to installation.

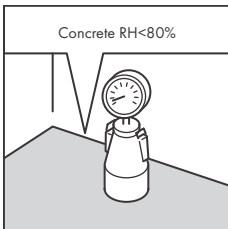


10

**The moisture content of any concrete sub-floor must be less than 80%rh (relative humidity) when tested in accordance with AS1884-2021.**

If you do not have the ability to accurately test the moisture content, or if the content is above 80%rh, a continuous damp proof must be installed.

The easiest way to install this damp-proof is by the installation of a PE plastic film of 150um thickness or greater. Joints should be overlapped 300mm and taped. Other types of 'coat on' damp proofs can be used, as long as they are compatible with the moisture content of your sub-floor. Failure to follow the procedure regarding sub-floor moisture, can lead to a floor failure.

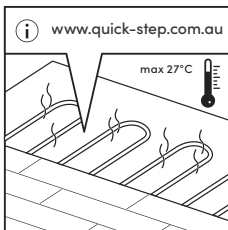


11

Separate rooms/zones with and without floor heating, and/or with different temperature controllers/temperature behaviour, must be installed with a transition profile with respect of the expansion gaps of 8mm on each side.

Additional instructions apply if there is underfloor heating. For health and safety reasons and to avoid problems with the Quick-Step Floor, certain important basic rules need to be followed:

**Floor Heating**

- Firstly it is very important the floor surface temperature does not exceed a surface temperature of maximum 27°C.
- Always change the temperature gradually at the start and end of a heating period.
- Finally try to avoid heat accumulation by carpets or rugs or by leaving insufficient space between furniture and the floor.
- Some water based and electrical floor heating systems are permitted. See separate installation instruction Floor heating.

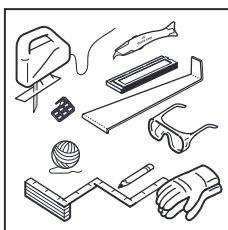


12

Because Quick-Step Hybrid Vinyl comes with an integrated underlay already, a separate underlay is not allowed before installing the Quick-Step Hybrid Vinyl.

The following standard tools are needed: hammer, saw with blades for plastic (a jig-saw, hand circular saw, hand saw, or cross-cut saw), appropriate dusk mask, tape measure, safety glasses, string / chalk line, gloves and a pencil. Besides that, you also need the following accessories: Quick-Step installation set (a pull-bar, spacers and a tapping block suitable for the Quick-Step click system) and suitable maintenance products.


The use of accessories other than Quick-Step Vinyl accessories may cause damage to your Quick-Step Hybrid Vinyl floor. In such cases the guarantee provided by Quick-Step will be void.

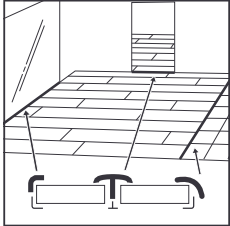

13

Choose the correct profile to cover the expansion gaps depending on the situation. Be aware that some profiles will need to be installed prior to the flooring.


Some areas can be installed without need for control joints, however it is a good idea to install control joints at doorways to allow the entire panel to expand or contract freely. This is called "compartmentalisation". A perimeter gap of 10mm is recommended, this will be covered with skirting, scotia or other special profiles available from your retailer. Expansion gap of 8-10mm is also required around pipes, thresholds and under door frames.

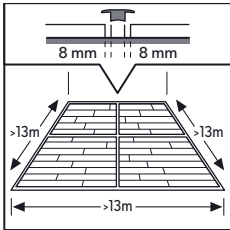

Undercutting plasterboard is also an option to allow for extra expansion. Be aware that if the flooring is installed at a higher temperature, it is likely to contract during cold periods, as such a cover of 5-8mm will be required. Similarly, when installed at low temperature, the floor is likely to expand during hot periods, as such a full gap of 10mm will be required.

**In general, continuous runs of flooring should not exceed 13m in a residential home. Larger rooms require additional expansion gaps and expansion profiles, for more information contact the manufacturer.**

A subfloor control joint can be covered with Quick-Step Hybrid Vinyl flooring. Please check the subfloor flatness requirements. Building movement joints must be transposed to the Quick-Step Hybrid Vinyl floor and a profile must be used.

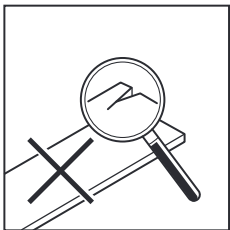

14


Check all panels before and during installation in optimal daylight conditions under the angle of light reflection. Check that the colours correspond to those ordered, the quantities are correct and there is no visible damage to the boxes. **Do not install any panels that display any obvious visible manufactured defect.**

Be aware that some designs have a natural variation within them.

For defects that are visible prior to installation, Quick-Step will never assume responsibility for the uplift & relay costs.


**An installed plank is considered as accepted and cannot be claimed.**

## 1. INSTALLATION

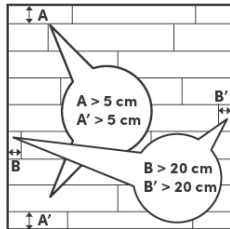

1


Before starting, carefully measure the length and the width of the room to plan a precise lay-out to achieve a balanced appearance of the floor. As shown in the image, A and A' not less than 5 cm & B and B' more than 20 cm.

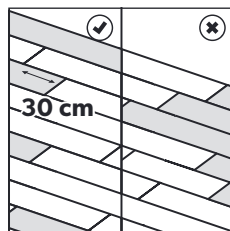

2

During installation, make sure that you mix the floor panels (and floor boxes) sufficiently so that there are not too many identical, lighter or darker planks next to each other. To obtain the best visual effect, it is best to install the panels in the direction of the longest wall and/or parallel to the incidence of light.


**Ensure that the end joints of the panels in 2 successive rows are never in line, they should be staggered by at least 30cm. For a natural look and better mechanical strength, we do not recommend an installation of the planks in a pattern but rather at random formation.**

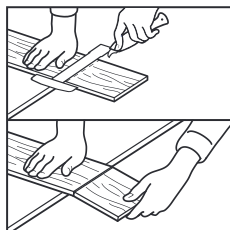


3

To shorten the length of the plank with a straight cut, you can cut the Quick-Step Hybrid Vinyl floors with the decor side face up, using a special concave vinyl cutting knife. In order to cut the vinyl plank, draw a straight line along which you will be cutting, and use the knife to make a firm cut in the surface. You never need to completely cut through the vinyl. Then break off the plank using both hands.

**(TIP: the attached underlay should be cut too before you snap the plank.)**

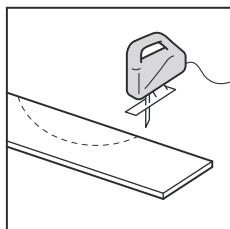


For any other cuts, you need to saw the planks. Depending on the type of saw, position your plank with the decor side face-up or face-down. Before making the actual cut, use a leftover piece to determine how the cleanest cut can be obtained (decor side face-up or face-down).

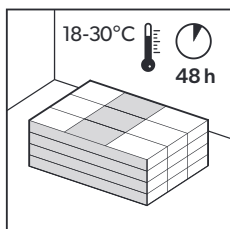

4

Installations in areas colder than recommended, will influence the installation properties of Quick-Step Hybrid Vinyl. The planks will be less flexible, cutting will be harder and small pieces difficult to cut out. The lower the temperature, the more difficult the installation and the higher the risk of damaging the click profile. Also, the risk of excessive expansion increases with decreasing installation temperature. Installation in areas warmer than recommended, increases the risk of excessive shrinkage/gaps between panels.

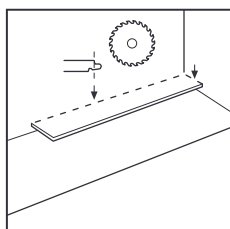


5

With Quick-Step Hybrid Vinyl panels you can choose where you want to start in the room. Think about what will be the easiest way to install the floor. We will demonstrate the installation of Quick-Step Hybrid Vinyl floor for right-handed people, from right to left (from front viewpoint). Because of the Uniclic click system, you can work in either direction.


**Quick-Step Hybrid Vinyl flooring has a patented locking system and is intended as a floating floor; panels should not be bonded to the subfloor, but in addition to that, it is not allowed to glue the joints between the planks.**

**Only for a plank replacement, it is allowed to glue the joints between the planks locally.**

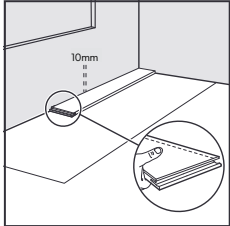

6


Start with the first planks that will be installed in the corner. Remove the click profile on both the long and the short side of the plank by sawing. For other planks of the first row (not in the corner), remove the click profile on the long side that will be directly next to the wall. Any side of a plank that is directly next to a wall, must have its click profile removed, in order to ensure the required 10mm expansion gap.

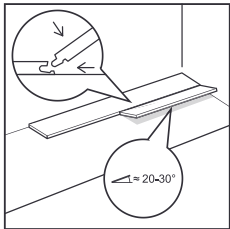

7

In order to make the start of the installation easier, assemble the first 3 rows away from the wall, so you can sit on the planks during the assembly. Then slide the first 3 rows at the wanted position close to the wall with distance spacers in place. Take string and hold it alongside the installed planks to check and adjust the straightness of your installed first 3 rows. It is recommended to make additional checks of the straightness, in order to confirm the straightness during the installation.

Remember to use the distance spacers for the expansion gap of 10mm along the perimeter.

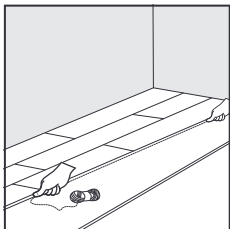


8

Uniclic® can be installed in two different ways.


The preferred method is method A (angle-angle):

First, rotate the short side of the plank to be installed, into the short side of the already installed plank, by means of the angle principle.

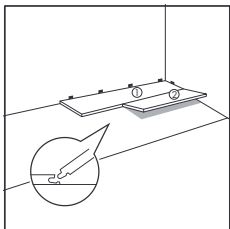


Then raise the newly installed plank to an angle of 20°-30°.


This will also raise the previously installed planks in the same row, because their short sides are already connected.

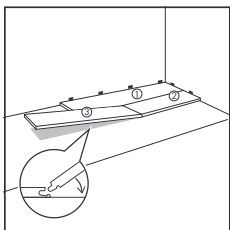



Now place your BOTH hands close to the joint as shown in the figure and pull the long side of the plank towards you. The panels will now click together.

You can either insert the tongue into the groove, or the groove on to the tongue. The tongue in groove method is the most common and easiest way.

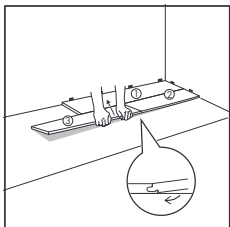

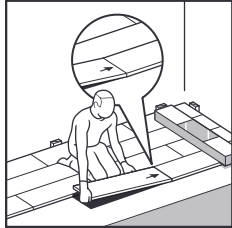


Note: It is advisable to sit with your knees or stand with your feet on the already installed panels, to ensure that they don't start shifting during further installation.

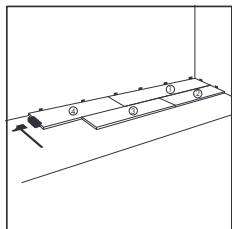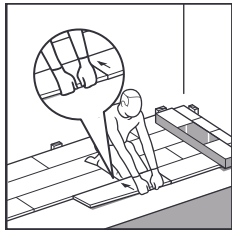


9

If method A is not possible (at hard to reach places by example), you can use method B (tapping):  
With Unilic® you can also join the panels, by tapping the planks into each other, eliminating the need to lift them. This method requires the use of the special Unilic® tapping block. **The planks should not be joined with a single tap, in order to avoid damaging the panels you must tap them together gradually.** You can angle the short or long side of the plank first and then tap to connect the other side.

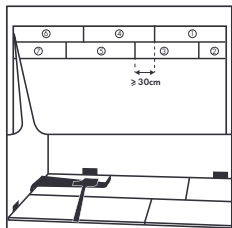


10

In places where it is too difficult to install the Unilic® planks with the tapping block (e.g. against the wall), you can pull them together using the pull-bar and a hammer.

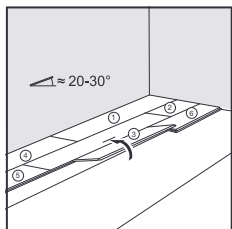

11


After the installation of each plank and before continuing with the next plank, check each short and long side joint to make sure there are no height differences and no openings.

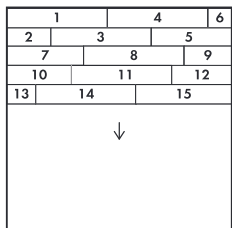

12

Continue the installation like this - row by row - towards the end of the room. The easiest way to work is to sit on the already installed planks.

### 3A. FINISHING

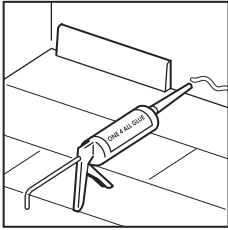


1

After removing all spacers and conducting a visual inspection of the floor, install the skirting-board or scotia against the wall. **Never attach the skirting-board or scotia to the floor.** This method allows the floor to expand and contract under the skirting-board.

**Do not fill the expansion gaps with silicone or anything else that can prevent the free movement of the flooring.** Skirting and plasterboard can be undercut if required to ensure adequate expansion is given.

For installations in a wet area read the instructions below "3B. FINISHING OF THE FLOORING IN WET AREAS" before installing the skirtings.

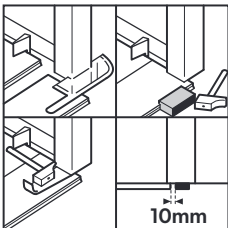


2

When the new floor meets a threshold or a doorway, we recommend undercutting the door frames or mouldings. To secure the correct cut, turn a plank upside down with the underlay below, and place it on the floor up to the door frame. This ensures that the cut will be made at the correct height. Then place a multi tool or hand saw flat against the plank and simply cut through the frame. When sawing the panels make sure that the expansion gap under the door is 10mm. Remove the cut out pieces and vacuum away any debris.

Install the plank on the long side, keeping the short side close to the undercut. Then slide the plank underneath the undercut towards the already installed plank in order to close the short end joint. Use the Quick-Step pull bar and/or tapping block to secure absolute tightness in the long and short joint.

If you cannot lift the panel (e.g. under radiators), use the Quick-Step pull bar and/or tapping block to tap the planks together.

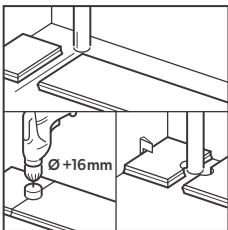


3

In rows where there is a pipe, make sure the pipe falls exactly in line with the short side of two planks. Take a drill bit with the same diameter as the pipe plus 16-20mm.

Click the planks together on the short side and add a third plank on the long side for stability. Drill a hole centered on the joint between the two planks.


Now you can install the planks.

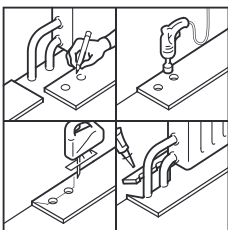

4


In rows where there is a double pipe, proceed as follows:

1. Measure where the pipe will come through the plank. Don't forget to allow room for the expansion gap. Measure the diameter of the pipe plus 16-20mm for the expansion.
2. Drill through the panel where the pipe will come through
3. Extend the hole to the edge of the panel
4. Lay the panel around the pipe.

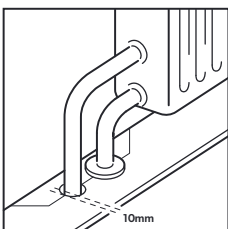

5

Then, using an appropriate soft PVC type glue along the cut edges of the piece you cut out, glue the piece in place. **Be sure no glue comes between the cut out piece and the subfloor.**

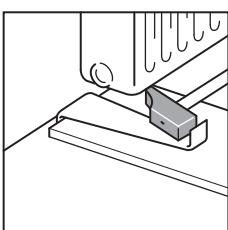

6

In places where it is difficult to install the planks with the tapping block (e.g. underneath radiators), you can tap them together with the pulling iron and a hammer.


### 3B. FINISHING OF THE FLOORING IN WET AREAS

This installation instruction can prevent water infiltration around the perimeter and obstacles of your Quick-Step Hybrid Vinyl. Following these instructions carefully ensures the water-resistant floor will perform in most applications / room settings and help to seal the perimeter of the floor preventing water infiltration into the vinyl core in high-risk areas.

The floor is not suitable for use in \*damp spaces\* i.e. within shower enclosures, pool areas, saunas, and rooms with built-in drainage.

**Please note that some national regulations do not allow floating installation in wet rooms, such regulations regarding floor applications must always be followed.**



For a water resistant finishing, use the elastic waterproof transparent paste (QS HydroKit) and the foamstrip (NEVRFOAMSTRIP15).

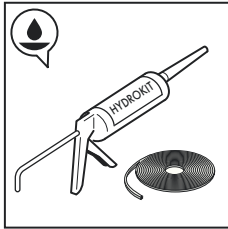

1


Sealing the perimeter expansion gaps combines a compressible PE foamstrip and the flexible and waterproof Quick-Step HydroKit. Place the PE foamstrip in the expansion gaps with the help of the self-adhesive backing and apply the flexible Quick-Step HydroKit under slight angle towards the Quick-Step floor. Make sure that the Quick-Step HydroKit covers about 1-2mm of the wall, the whole foamstrip and 1-2mm of the floor.

*Tip: To make work more clean, remove any excess HydroKit immediately.*

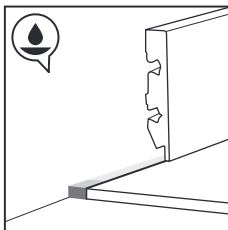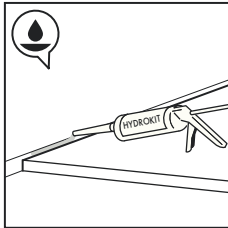


2

Install the skirting-board or scotia against the wall.

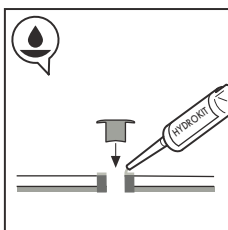


3

Fix the Incizo base profile to the subfloor with an appropriate glue. Apply the flexible HydroKit on the PE foamstrip that is in the expansion gap.

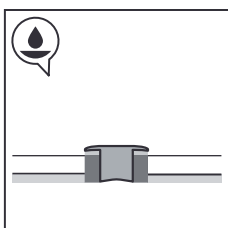

4


Push the Incizo profile in the base profile and the wet HydroKit.

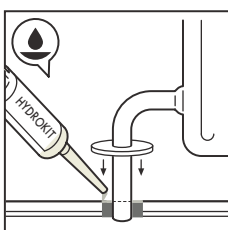

5

For a perfect finish around pipes, use a pipe cover and the Quick-Step HydroKit, taking into account the expansion of 8-10mm. Place the foamstrip in the expansion gaps. Apply Quick-Step Hydrokit on the foamstrip. Then place the pipe covers in a floating installation.

## 4. MAINTENANCE

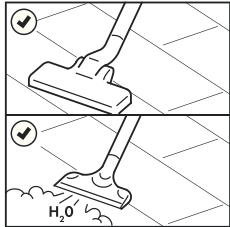

1


You can immediately walk on your new Quick-Step Hybrid Vinyl floor after installation.

Appropriate maintenance procedures will help to preserve the appearance and will extend life of a Quick-Step Hybrid Vinyl floor. The frequency of maintenance will depend on the amount and type of traffic, degree of soiling, the floor colour and type.

For full maintenance instructions and recommended products we refer you to [www.quick-step.com](http://www.quick-step.com).

For dry maintenance, we advise a Quick-Step mop or vacuum cleaner. Make sure the vacuum cleaner is equipped with soft wheels and a special brush to avoid scratches on your floor.


You can use a steam cleaner on the Quick-Step Hybrid Vinyl range, if there's no steam directly coming on the Quick-Step Hybrid Vinyl. So it must always be used with an appropriate cloth on the steam opening, which guarantees also an homogeneous heat and steam distribution. It is also important to take care to hold the apparatus not too long on the same place and clean the floor in the length direction of the planks.

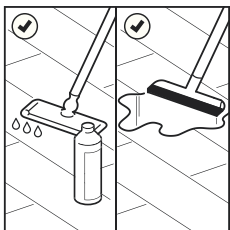

2

Your Quick-Step Hybrid Vinyl floor can be cleaned with a damp or wet mop. Quick-Step Cleaner is a maintenance product specifically developed to keep your new hybrid vinyl floor in top condition. Never use natural soap detergents since this will leave a sticky film on the surface which will collect dust and dirt and will be difficult to remove. The same with cleaning agents containing abrasive particles, these might dull down the surface. It is always important not to overdose any cleaning agent, as this will lead to a build up of cured cleaning agent which is difficult to remove without using a vinyl stripper. **When machine washing microfibre mop heads, never use fabric softener as this will leave a residue on your floor that will be difficult, sometimes impossible to remove.**

We always recommend to remove spilled liquids from the floor immediately.

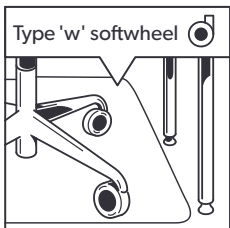

3

Protect furniture and chair legs. Use (office) chairs type W and seats with soft wheels that are suitable for a hybrid vinyl floor and/or use a suitable non-rubber backed desk mat.



4


Never drag heavy items or furniture over the floor, but lift them up.

Make sure furniture legs have a large floor surface and are provided with non-staining floor protectors. The taller and/or wider the furniture feet are, the better the weight distribution on the floor will be, and the less chance there is to damage the floor.

Place non-rubber backed mats at all outside entrances to prevent dirt, grit and soil from being transferred onto your floor. This will reduce damages, the maintenance requirement and extend the life of your floor.

**Note:** Prolonged contact with some rubber types and/or latex can cause a permanent stain.

Do not allow cigarettes, matches or other very hot items to contact the floor as this may cause permanent damage.

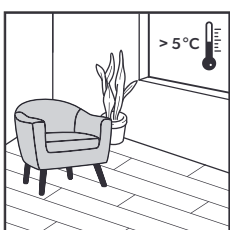

5

Ensure that the indoor climate conditions are always kept > 5°C and preferably between 18-30°C. It is also important to keep the subfloor in the temperature range mentioned above.

Bad maintenance can damage your floor. For further information on how to clean and maintain your floor, please visit [www.quick-step.com](http://www.quick-step.com). For specific cleaning instructions in commercial applications or projects, you can contact the Quick-Step technical department.